

Remark:

This instruction guide provides a guideline for user to install Linear type fixtures in typical condition. Please make sure all the procedure and material selection are in accordance to the actual site condition.

Recommend screw type: outer hexagon M4 tapping screw

Screw material: i) Color-plated Zinc Carbon Steel 1215

ii) Stainless Steel 316 or 316L


iii) Screw dimension: 12mm - 20mm (length)



IMPORTANT SAFETY INSTRUCTIONS



⚠ Warning	Only qualified person may work on electric wiring and equipment.
	Be sure power supply voltage has +20% buffer for the total power of a daisy chain connection. (D/C input type)
⚠ Caution	Switch off the power when installing the fixture.
	All electrical connections and the installation of this fixture must be in agreement with all national and local electrical codes and regulations.

For the wallwasher with optical title angle lens, make sures the thinner silk screen printing on the tempered glasses is adjacent to the wall.

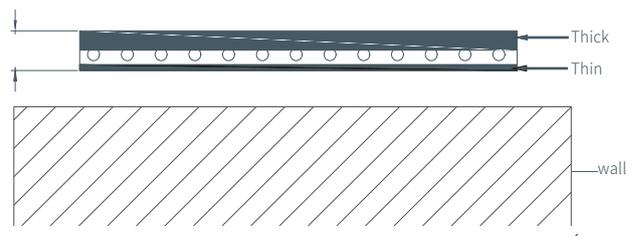


Fixed mounting clip

1. Screw the fixed mounting clip with M4 screw to the desired installation location.

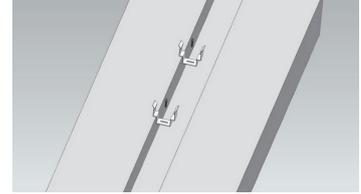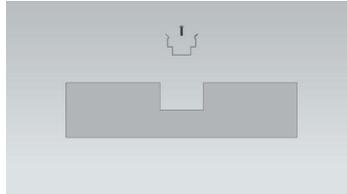

2. Mount the fixture directly to the mounting clip

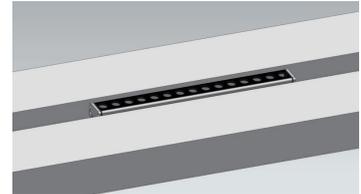

Adjustable mounting bracket

1. Position the mounting bracket at the desired location and tilt the fixture top to one side.



2. Screw the M4 screw to the mounting bracket hole.




3. Tilt the fixture to the other end and repeat step 3.



Connect the cables

After located the fixtures, connect the input cable to the power lead in or next fixture in the daisy-chain to complete the installation. Please consult the factory regarding the maximum number of fixtures allowed to be connected in a daisy chain.

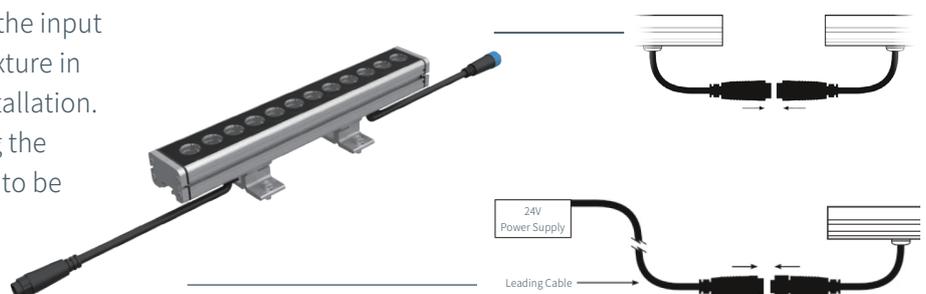

Adjustable mounting bracket

1. Position the mounting bracket at the desired location and tilt the fixture top to one side.




2. Screw the M4 screw to the mounting bracket hole.



3. Tilt the fixture to the other end and repeat step 3.



4. Connect the fixture to the leading cable (Power and Signal) or the next fixture in the daisy-chain to complete the installation. Please consult the factory regarding the maximum number of fixtures allowed to be connected in a daisy chain.

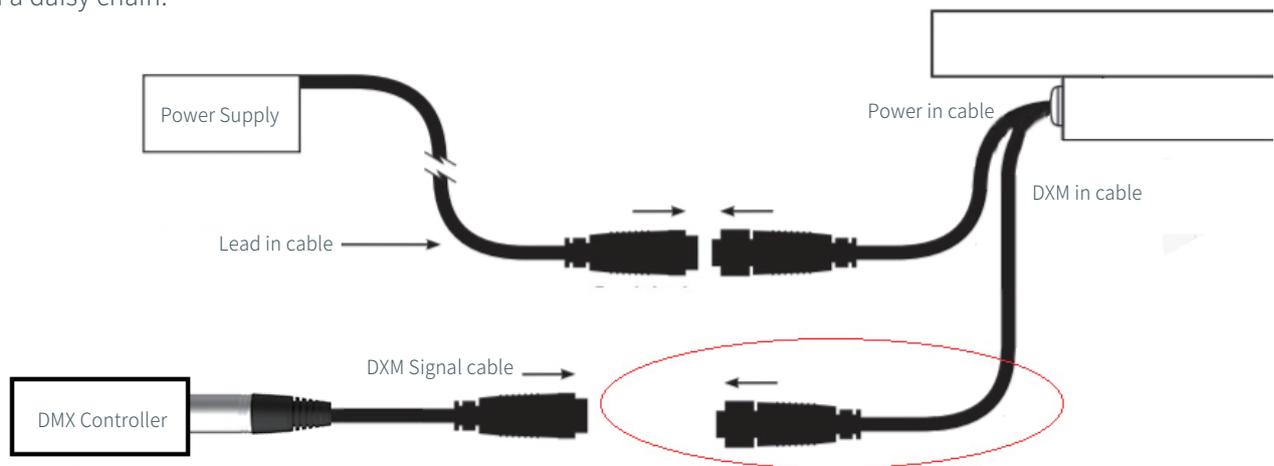

Remark Make use the indicator on the end cap and align all the fixture in the same direction before installation.



Related accessories(order separately)

EDCDT-300



DLMBA-H81
adjustable mounting
bracket for RGB



OP-4350
DMX Decoder



XLR3-3pincable

